




Acer Iconia A1-830 Rear Facing Camera Replacement

This guide shows how to replace the rear facing camera, which is on the back-left corner of the tablet.

Written By: Brendan Coveney

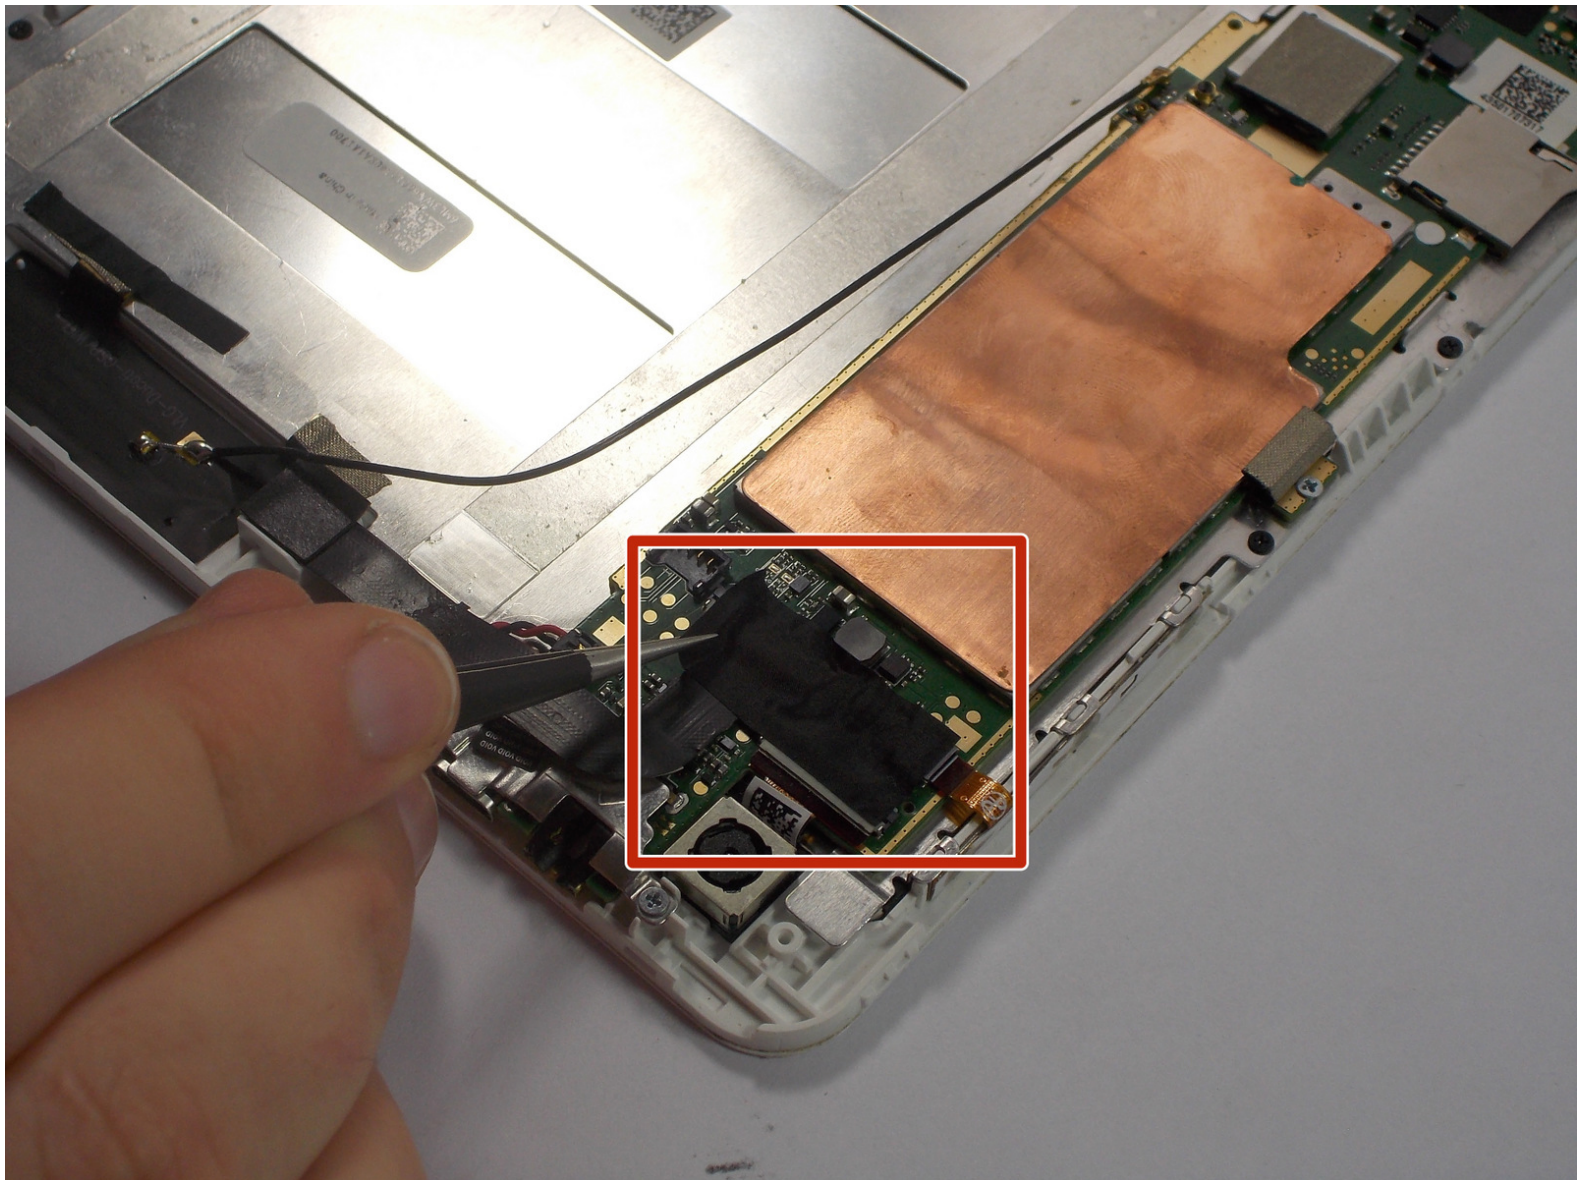

INTRODUCTION

This tiny digital camera is connected to the motherboard via a ribbon cable, which is hiding underneath some tape. You will need steady hands when you use the metal tweezers to remove the tape and the camera.



TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel




- Prepare your working space. The ideal work space has a flat, level surface that is clean and well lit.
- Shut down your Acer Iconia A1-830.
- Remove any cables or exterior covers from your tablet.
- Place it on your work space, with the screen facing up.

Step 2

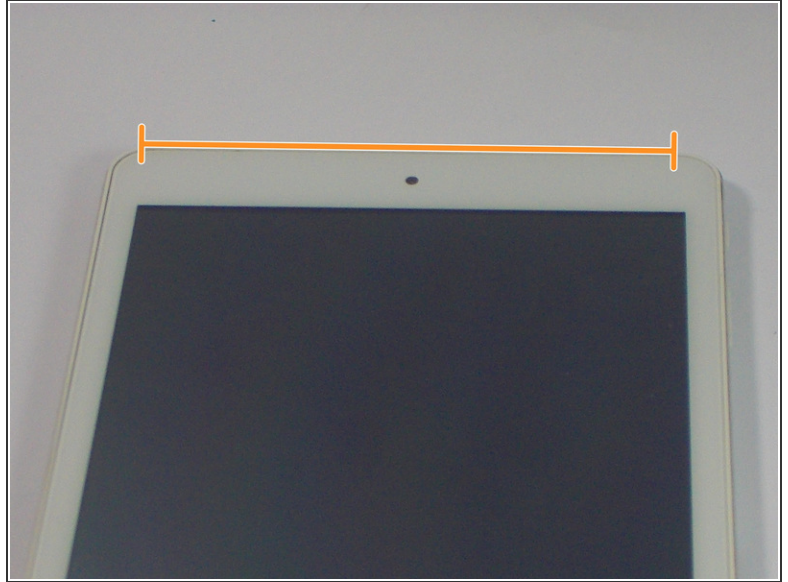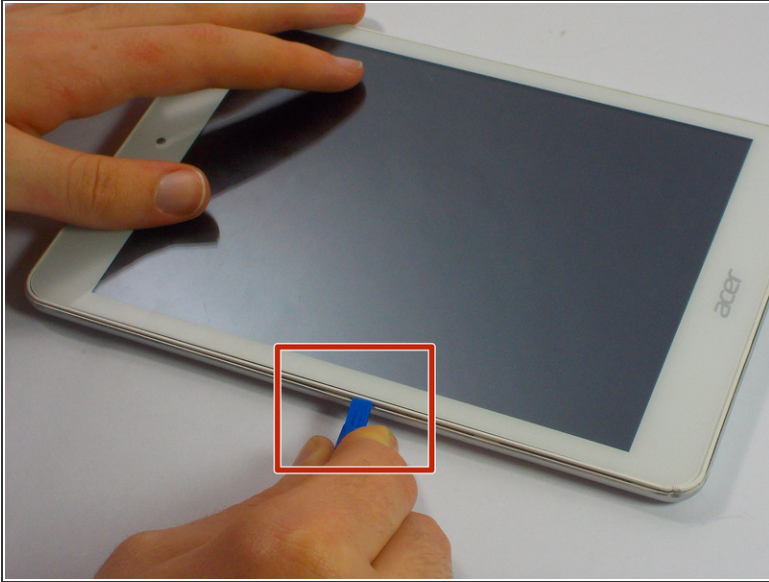


- Wedge the plastic opening tool into the tiny gap between the white plastic front bezel and the aluminum rear panel.
- Do not try to pry apart the top edge on the front side near the front-facing camera.

Step 3 — Battery

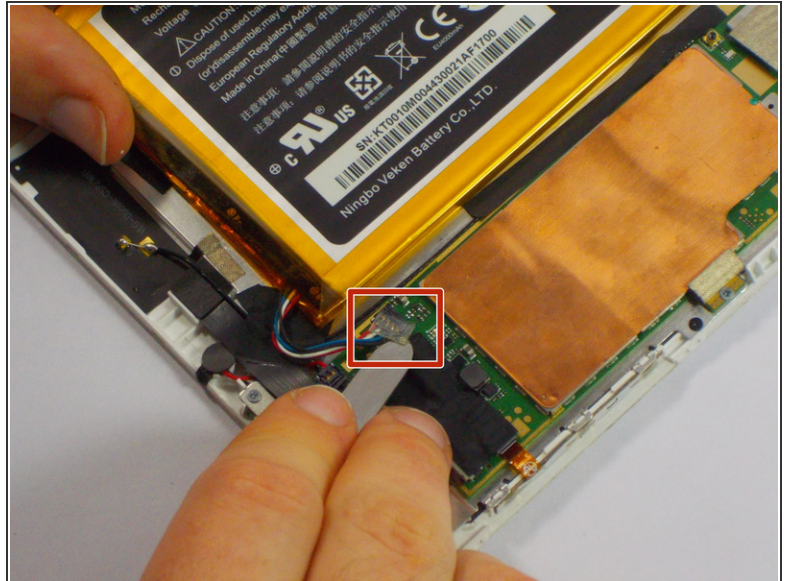


- Remove the small clear plastic cover on top of the battery cable with the nylon or metal spudger.

Step 4

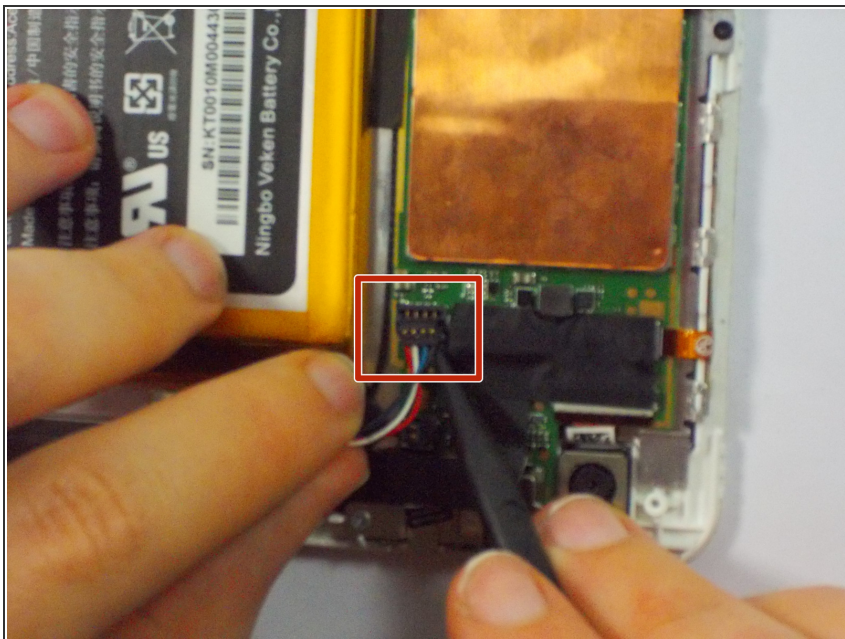

- Remove the battery cable by lifting it up with the pointy end of the black nylon spudger.


Step 5

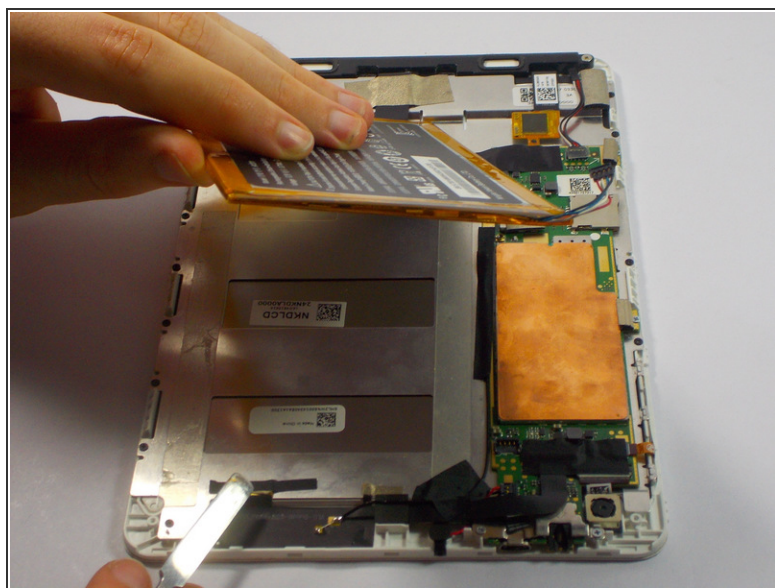

- Un-stick the battery from the metal plate using the black nylon spudger.



⚠ Be careful not to puncture the battery while removing it.

Step 6 — Rear Facing Camera

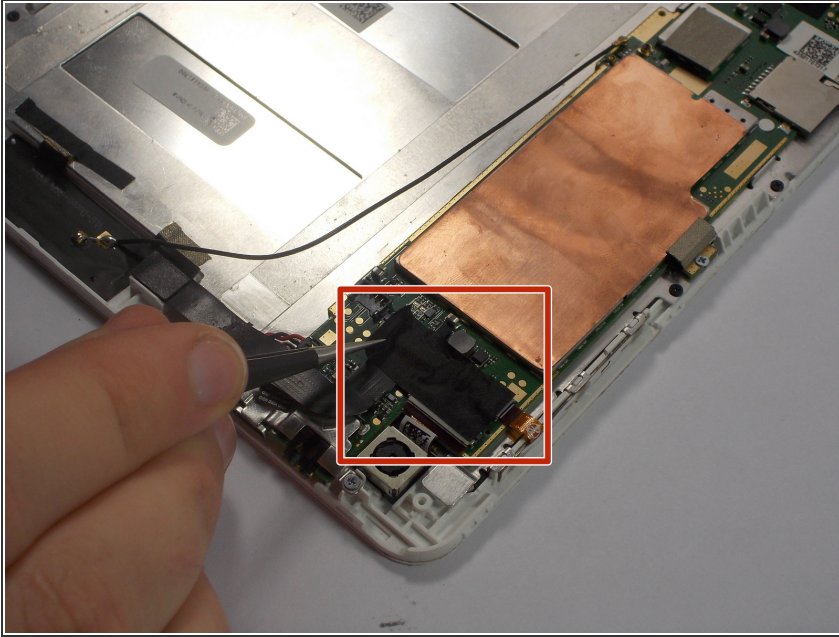

- Remove the piece of black tape covering the rear facing camera ribbon cable connector.

Step 7

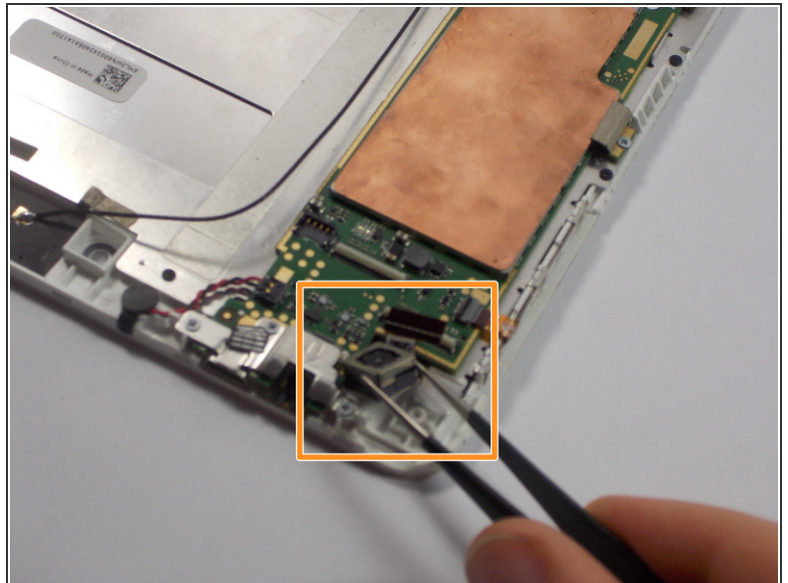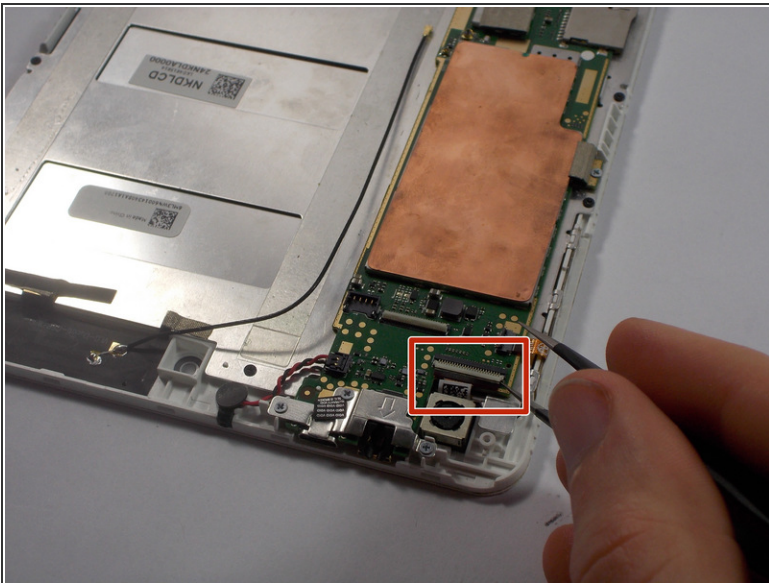

- Lift up the small white lever on the the ribbon cable connector with the metal tweezers to remove the ribbon cable.
- Lift out the rear facing camera from the plastic frame with the metal tweezers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-20 09:24:24 AM.